

JAMMAT

(GND)	JAMMA-1	○	—————	■	GND
(GND)	JAMMA-2	○	—————	■	GND
(+5V)	JAMMA-3	○	—————	■	+5V
(+5V)	JAMMA-4	○	—————	■	+5V
(-5V)	JAMMA-5	○	—————	■	-5V
(+12V)	JAMMA-6	○	—————	■	+12V
KEY	JAMMA-7	○	—————	■	
(CCNTRL)	JAMMA-8	○	—————	■	CCNTRL
(C-LOCKL)	JAMMA-9	○	—————	■	
(SPKR+R)	JAMMA-10	○	—————	■	SPKR+L
(SPKR+L)	JAMMA-11	○	—————	■	SPKR+R
(RED)	JAMMA-12	○	—————	■	RED
(BLUE)	JAMMA-13	○	—————	■	BLUE
(VID GND)	JAMMA-14	○	—————	■	VIDGND
(SELFTEST)	JAMMA-15	○	—————	■	SELFTEST
(COINL)	JAMMA-16	○	—————	■	COINL
(STARTL)	JAMMA-17	○	—————	■	STRT1
(UPLA)	JAMMA-18	○	—————	■	UP1
(DOWNLA)	JAMMA-19	○	—————	■	DN1
(LEFTLA)	JAMMA-20	○	—————	■	LF1
(RIGHTLA)	JAMMA-21	○	—————	■	RT1
(LBUTTON1)	JAMMA-22	○	—————	■	ACTA1
(LBUTTON2)	JAMMA-23	○	—————	■	ACTB1
(LBUTTON3)	JAMMA-24	○	—————	■	ACTC1
(LEFTLB)	JAMMA-25	○	—————	■	ACTTL1
(RIGHTLB)	JAMMA-26	○	—————	■	ACTTR1
(GND)	JAMMA-27	○	—————	■	GND
(GND)	JAMMA-28	○	—————	■	GND

JAMMAB

(GND)	JAMMA-A	○	—————	■	GND
(GND)	JAMMA-B	○	—————	■	GND
(+5V)	JAMMA-C	○	—————	■	+5V
(+5V)	JAMMA-D	○	—————	■	+5V
(-5V)	JAMMA-E	○	—————	■	-5V
(+12V)	JAMMA-F	○	—————	■	+12V
KEY	JAMMA-H	○	—————	■	
(CCNTRR)	JAMMA-J	○	—————	■	CCNTRR
(C-LOCKR)	JAMMA-K	○	—————	■	
(SPKR-R)	JAMMA-L	○	—————	■	SPKR-L
(SPKR-L)	JAMMA-M	○	—————	■	SPKR-R
(GREEN)	JAMMA-N	○	—————	■	GREEN
(SYNC)	JAMMA-P	○	—————	■	COMPSYNC
(SERVICE)	JAMMA-R	○	—————	■	SERVICER
(TILT)	JAMMA-S	○	—————	■	TILT
(COINR)	JAMMA-T	○	—————	■	COINR
(STARTR)	JAMMA-U	○	—————	■	STRT2
(UPRA)	JAMMA-V	○	—————	■	UP2
(DOWNRA)	JAMMA-W	○	—————	■	DN2
(LEFTRA)	JAMMA-X	○	—————	■	LF2
(RIGHTRA)	JAMMA-Y	○	—————	■	RT2
(RBUTTON1)	JAMMA-Z	○	—————	■	ACTA2
(RBUTTON2)	JAMMA-AA	○	—————	■	ACTB2
(RBUTTON3)	JAMMA-BB	○	—————	■	ACTC2
(LEFTRB)	JAMMA-CC	○	—————	■	ACTTL2
(RIGHTRB)	JAMMA-DD	○	—————	■	ACTTR2
(GND)	JAMMA-EE	○	—————	■	GND
(GND)	JAMMA-FF	○	—————	■	GND